


Hinge change instruction


Attention!

The reinforcements are not fixed to the frame. Never unscrew all 4 reinforcement screws at once.


Loosen the top screw
Unscrew 3 bottom screws

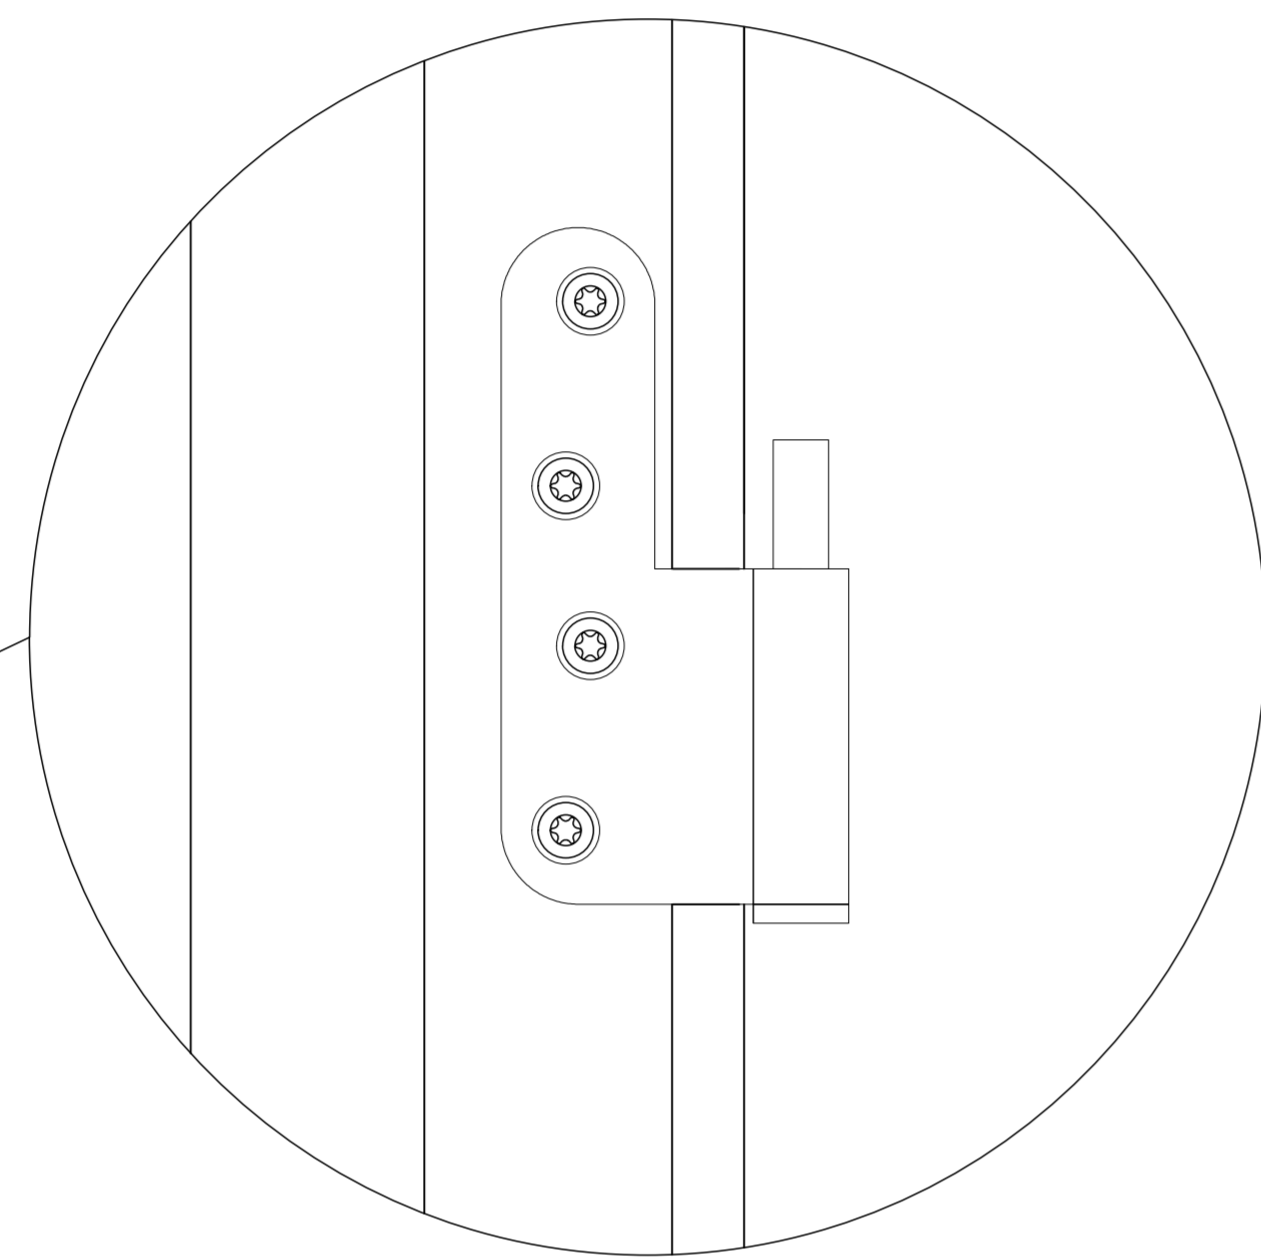


Turn the hinge

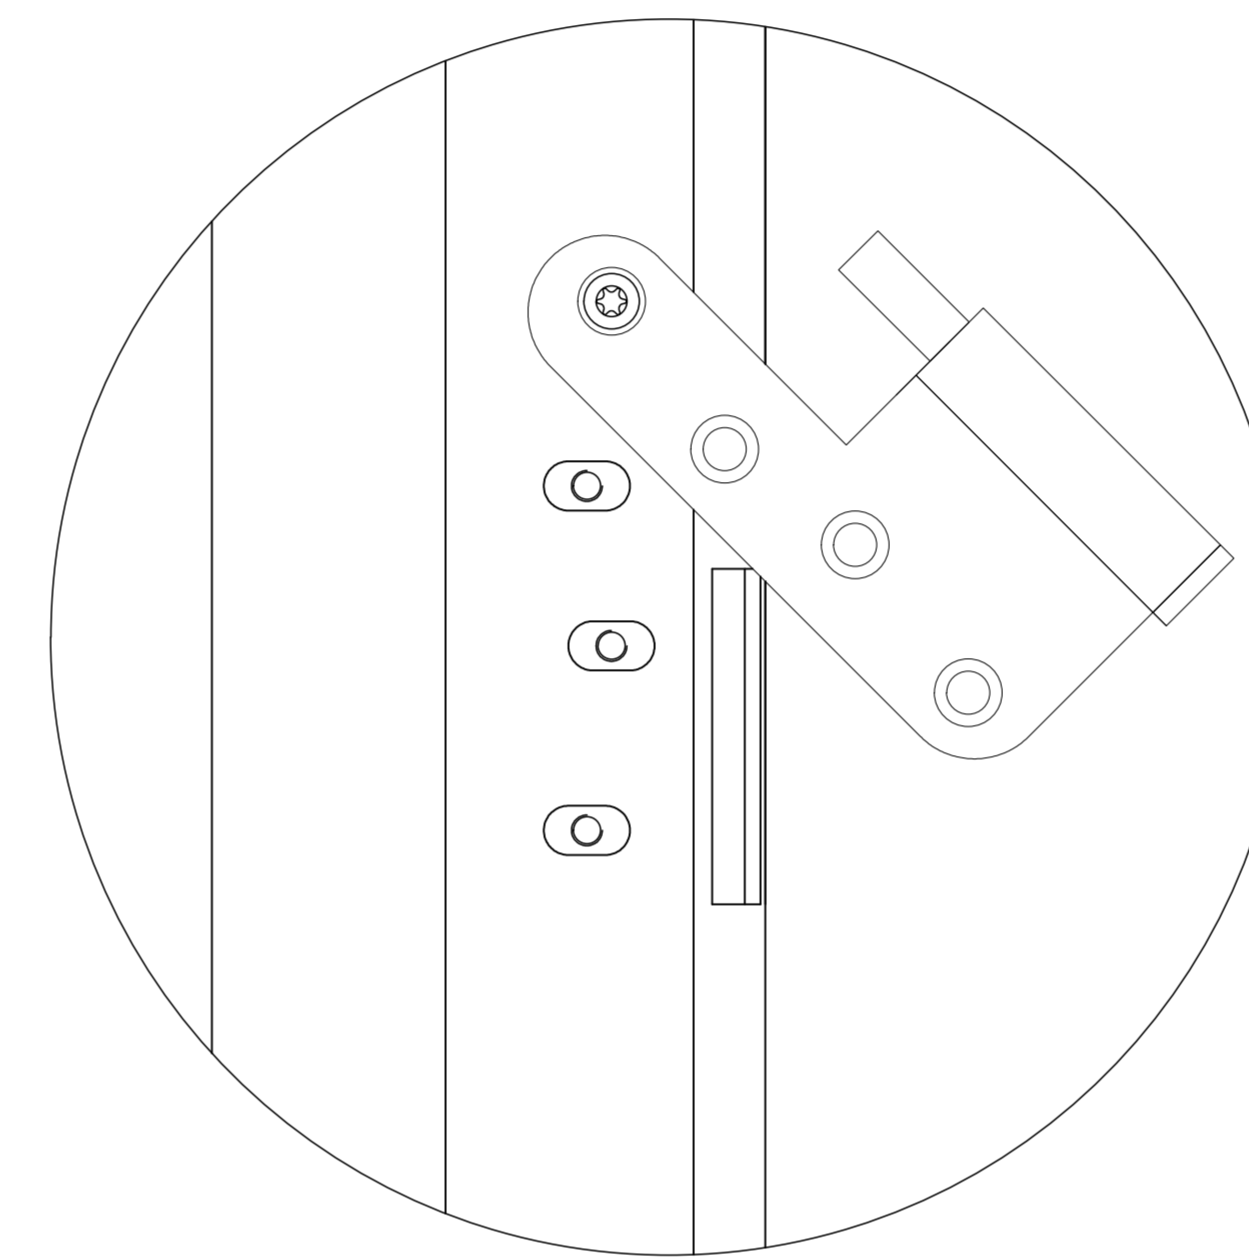


Screw th 2 bottom screws to
the frame reinforcement

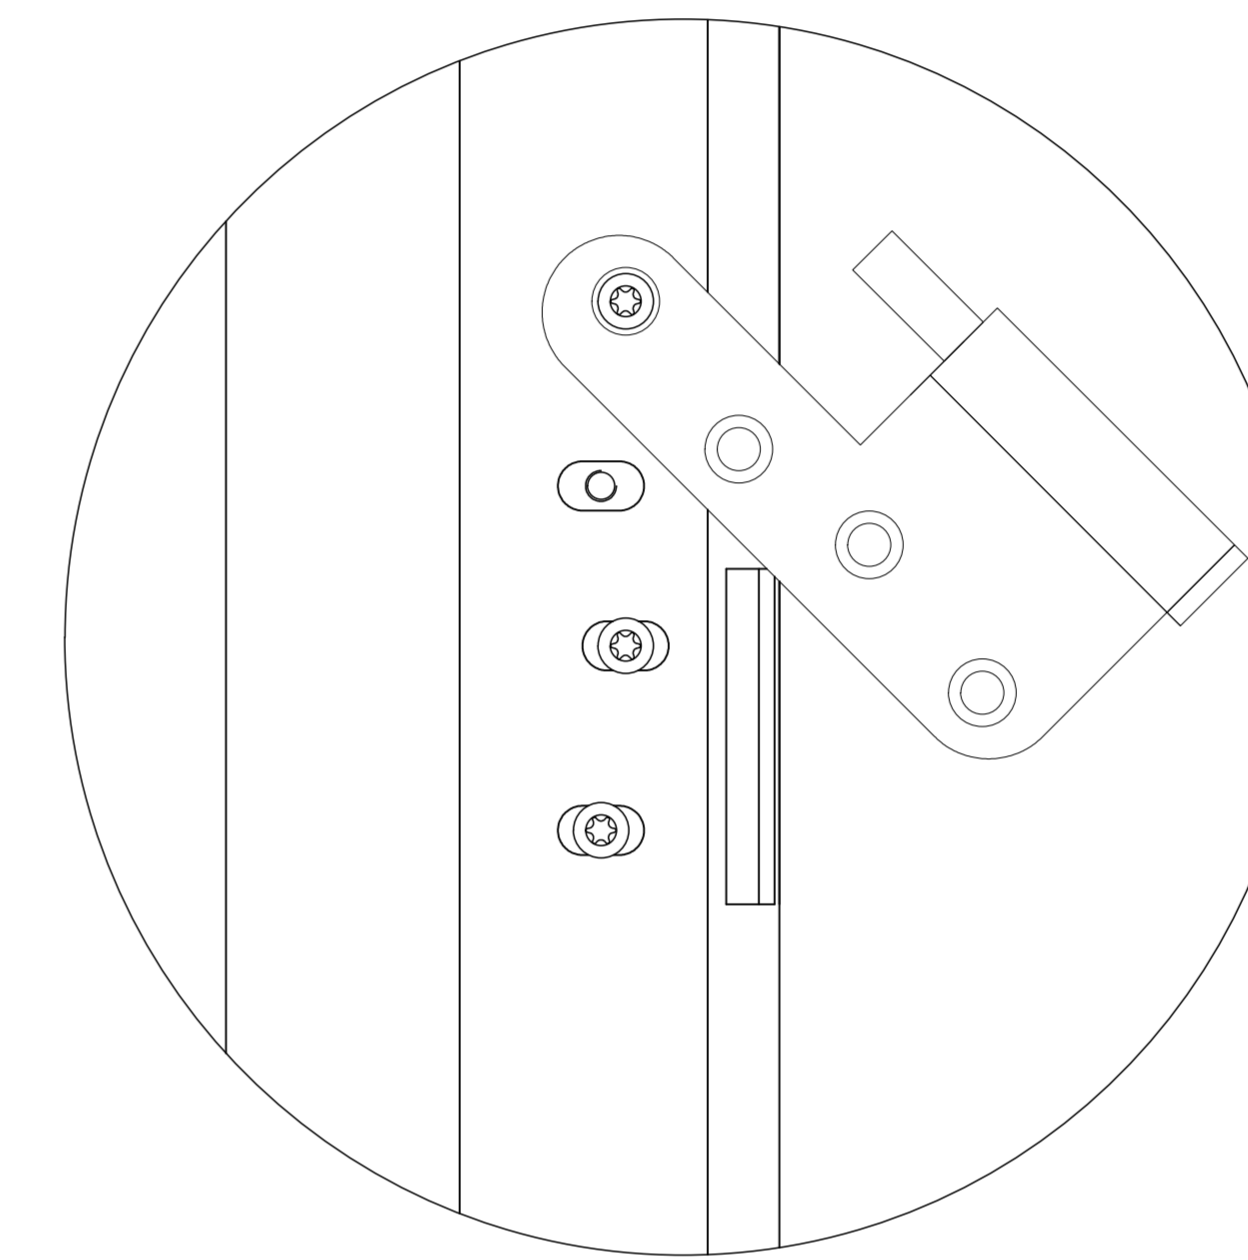


Unscrew the top screw
Take away the hinge

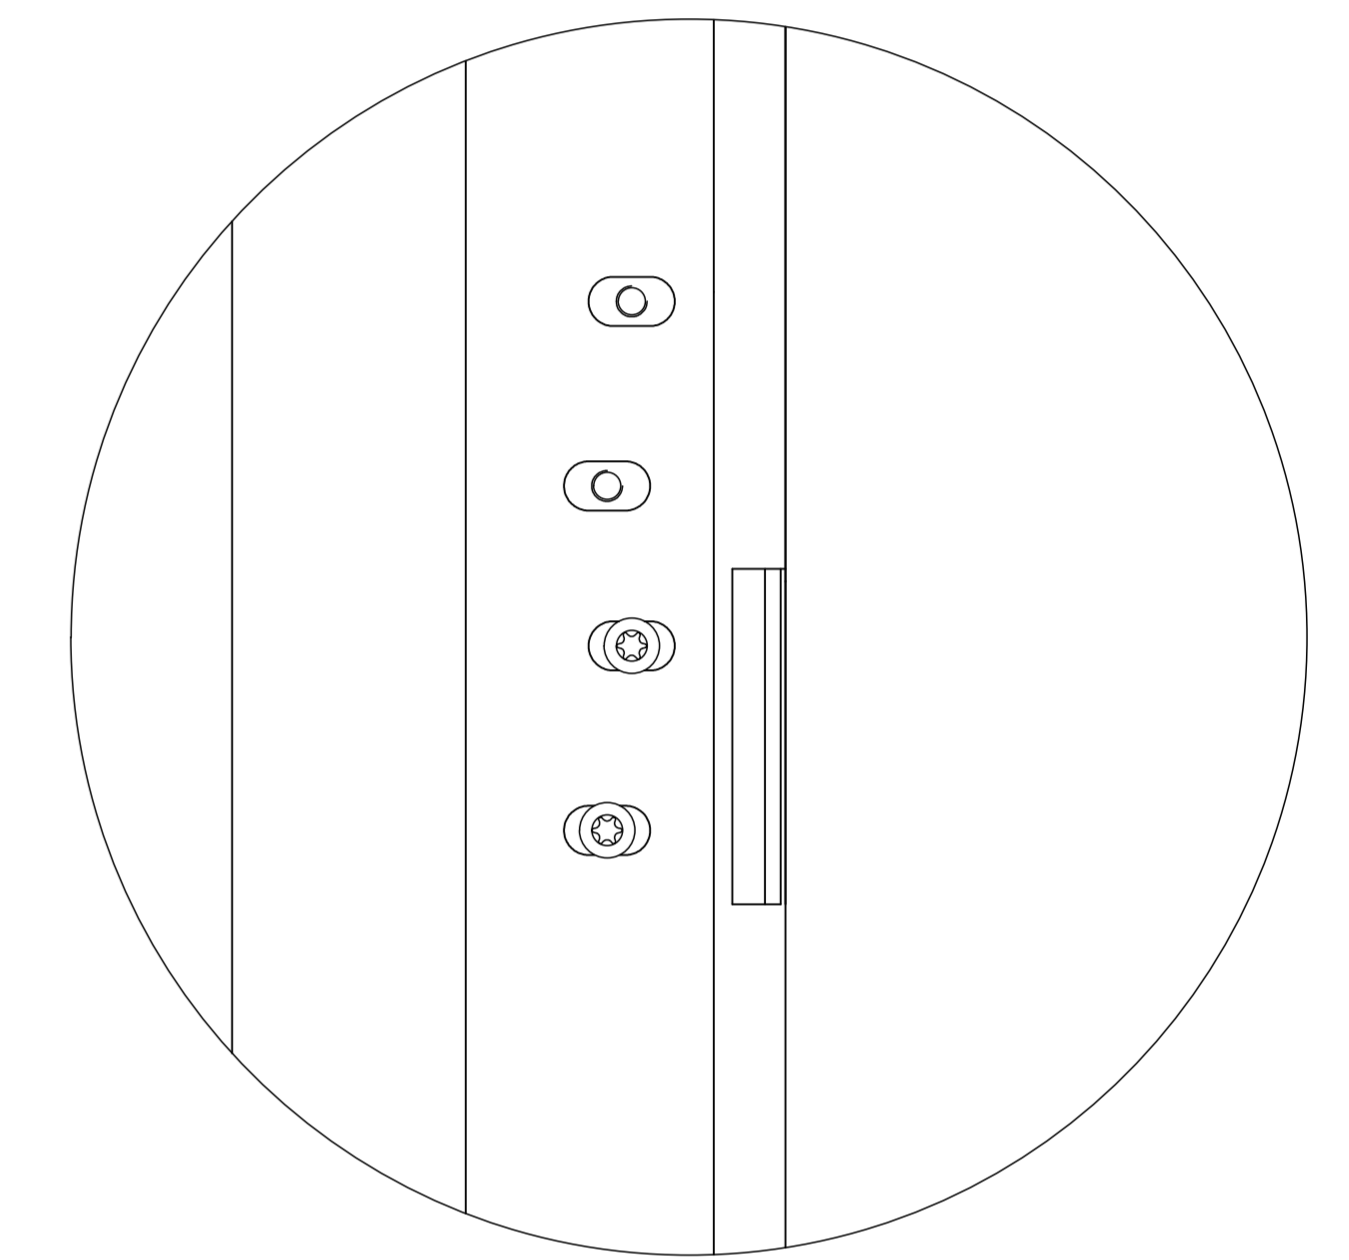


Screw the new hinge to the
frame with the top screw

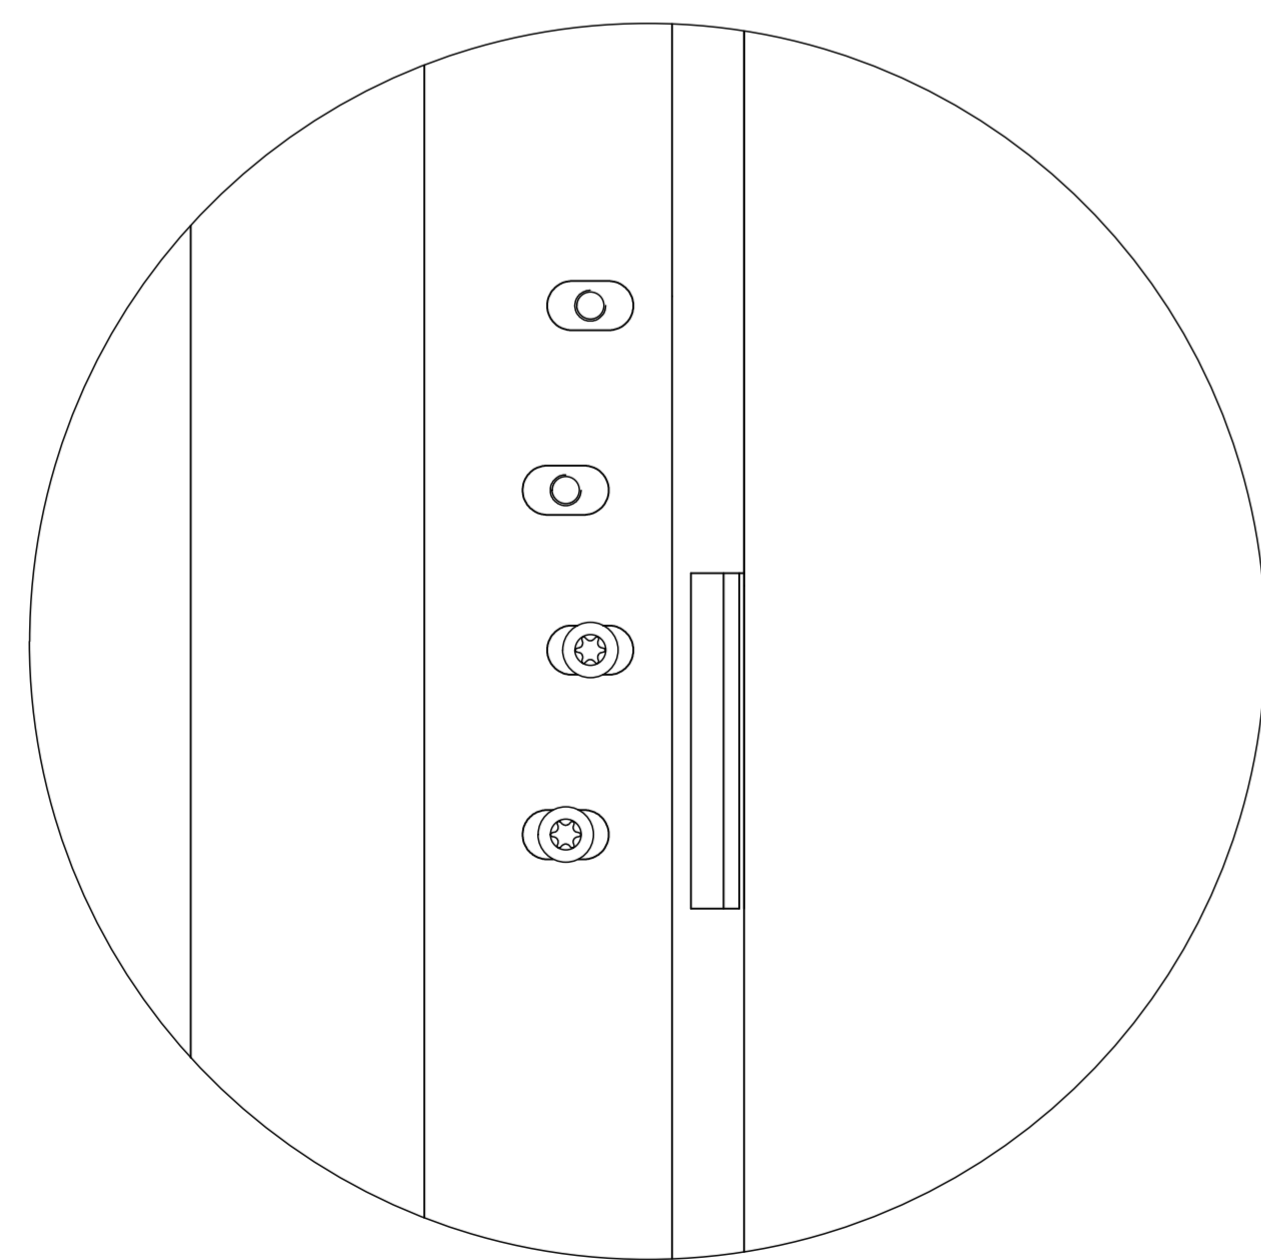




Unscrew the 2 bottom
screws

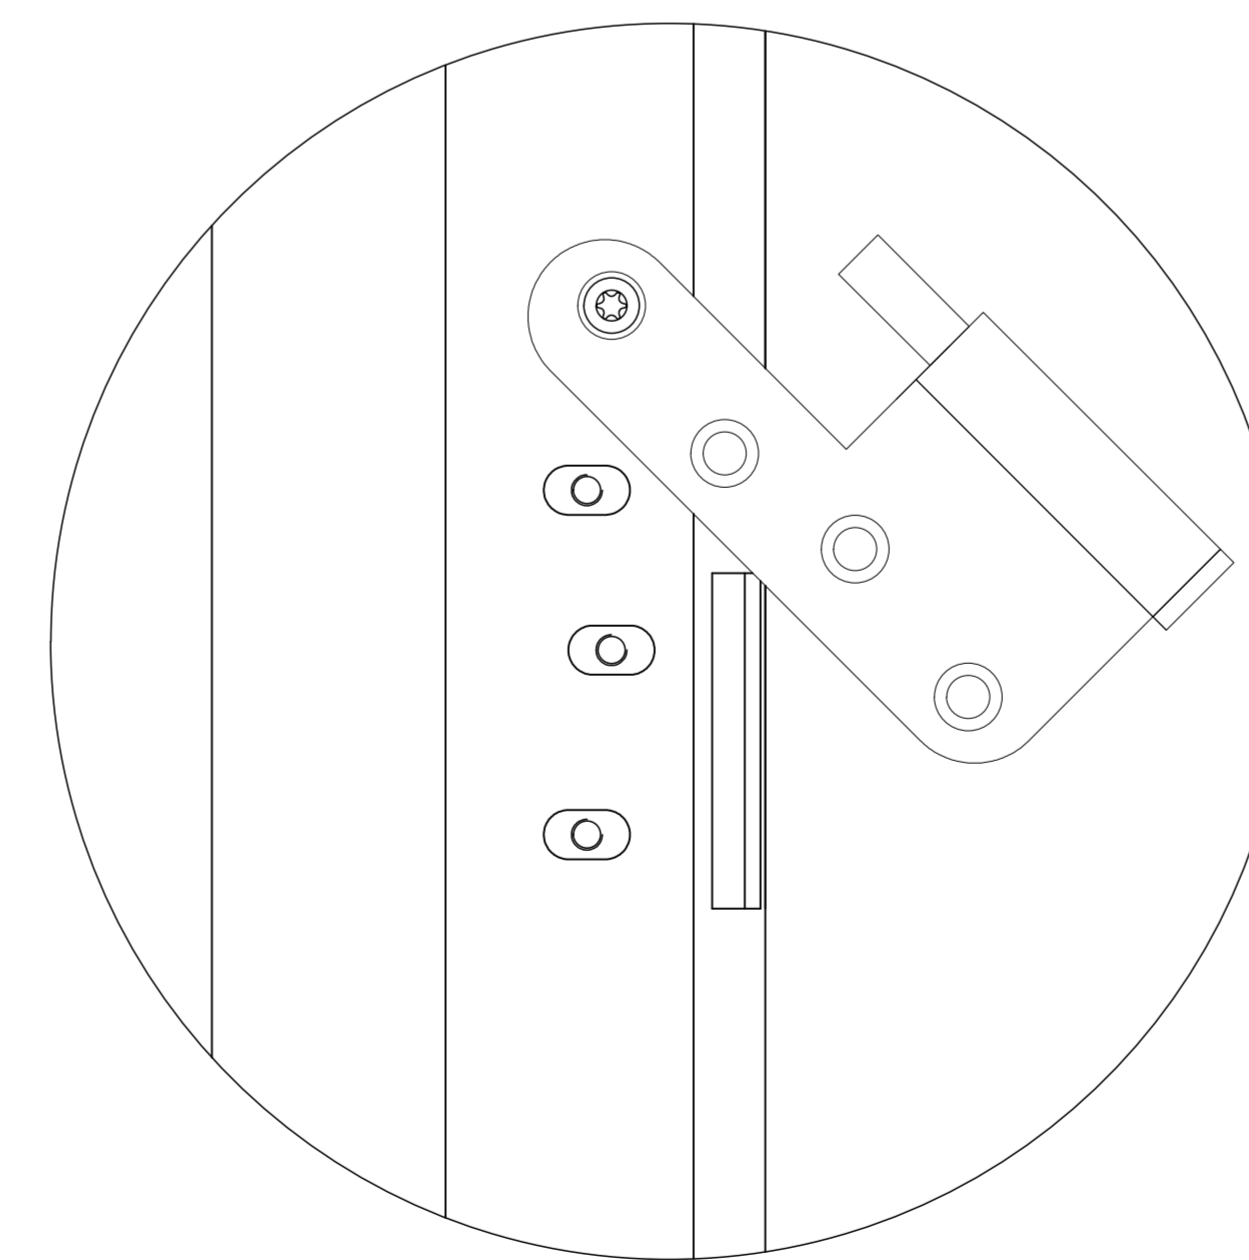

Turn the hinge

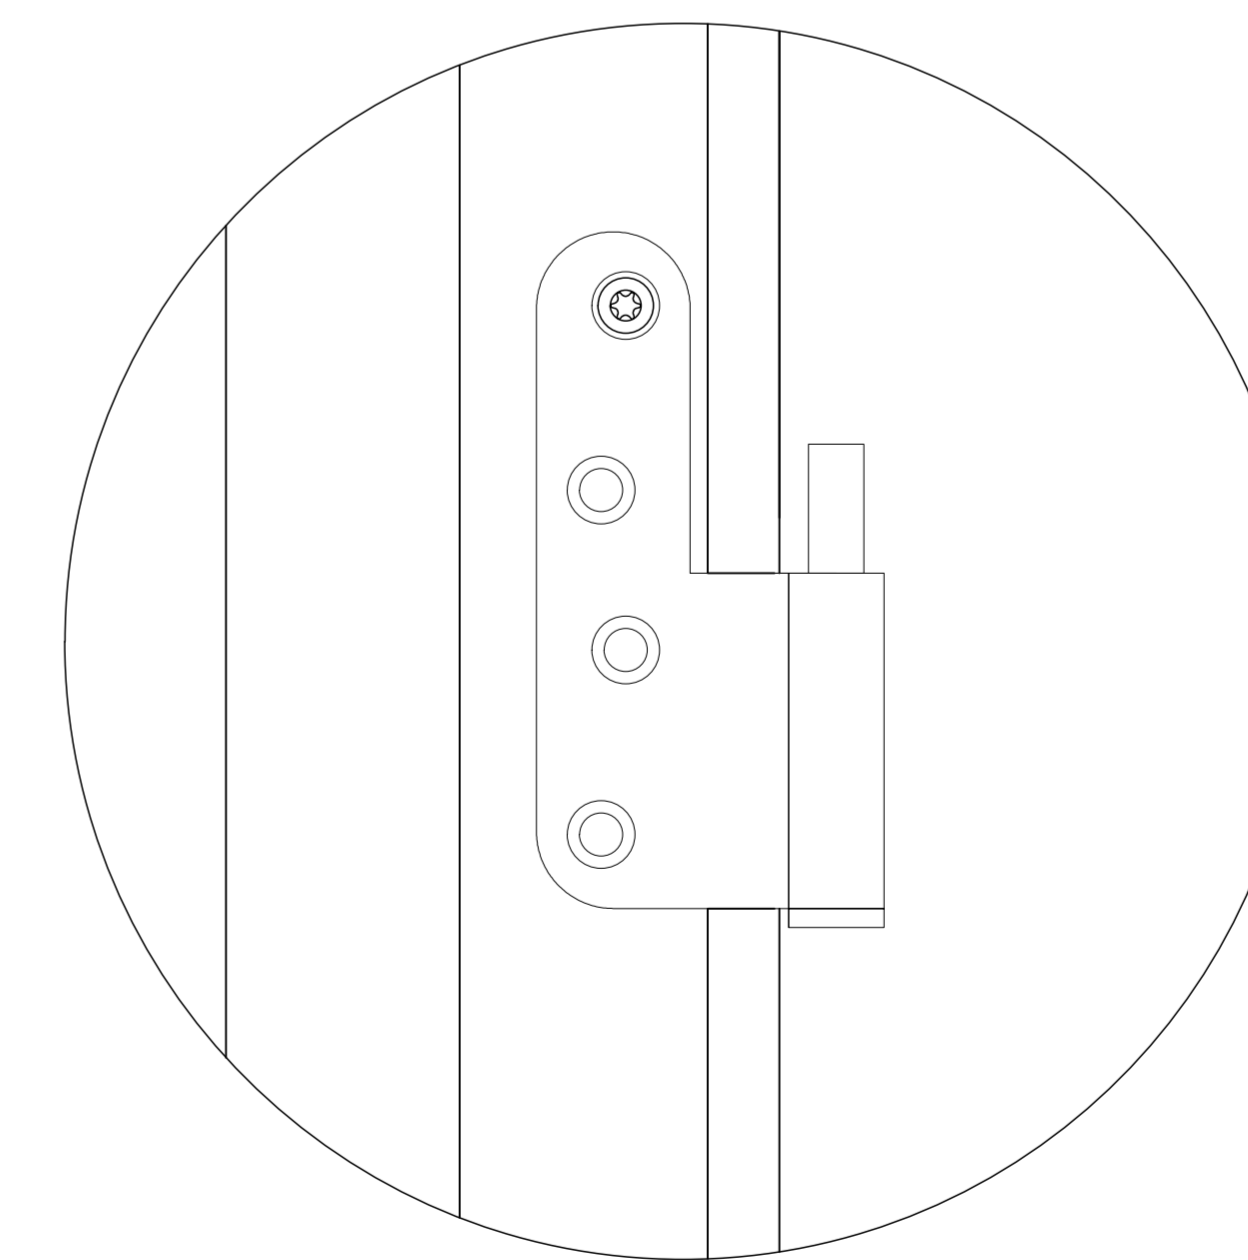

Screw all the screws

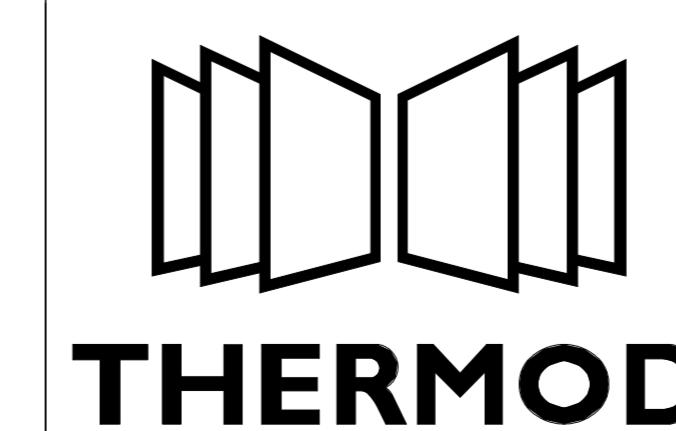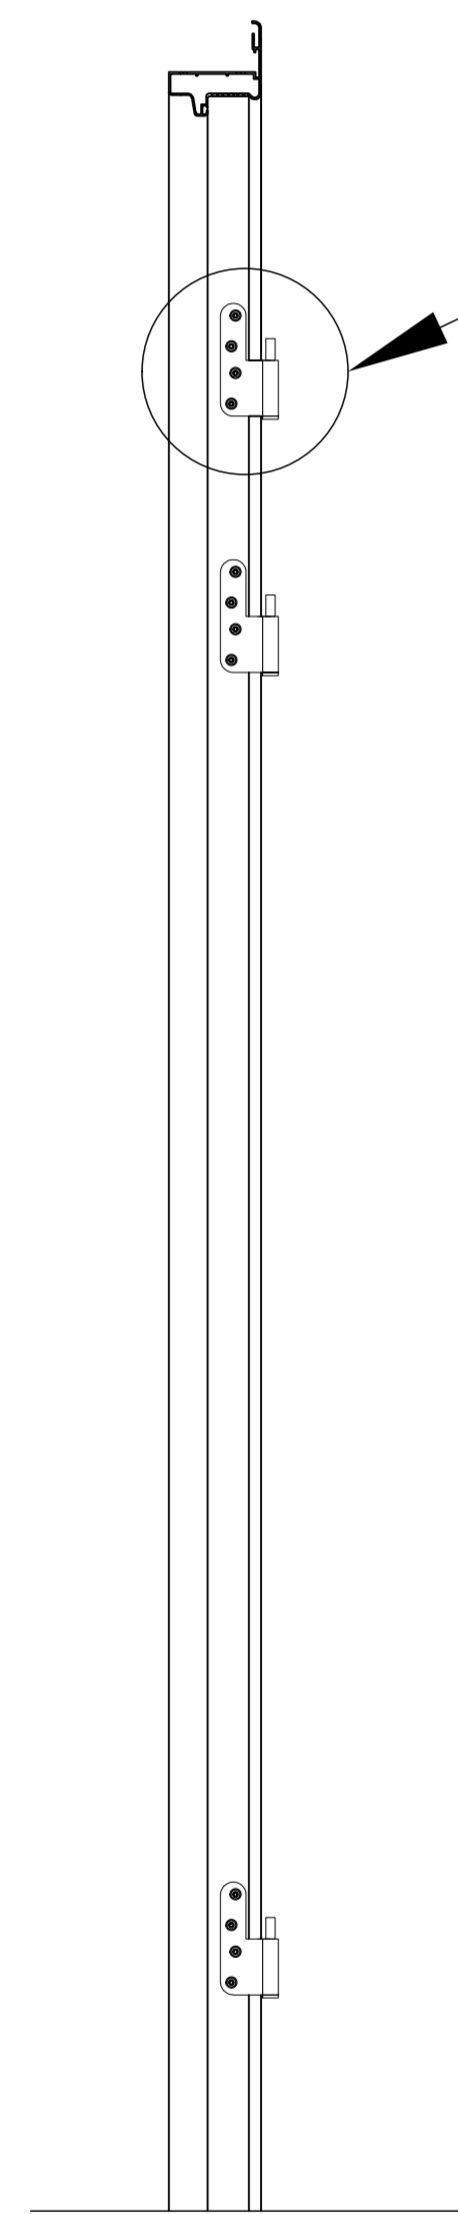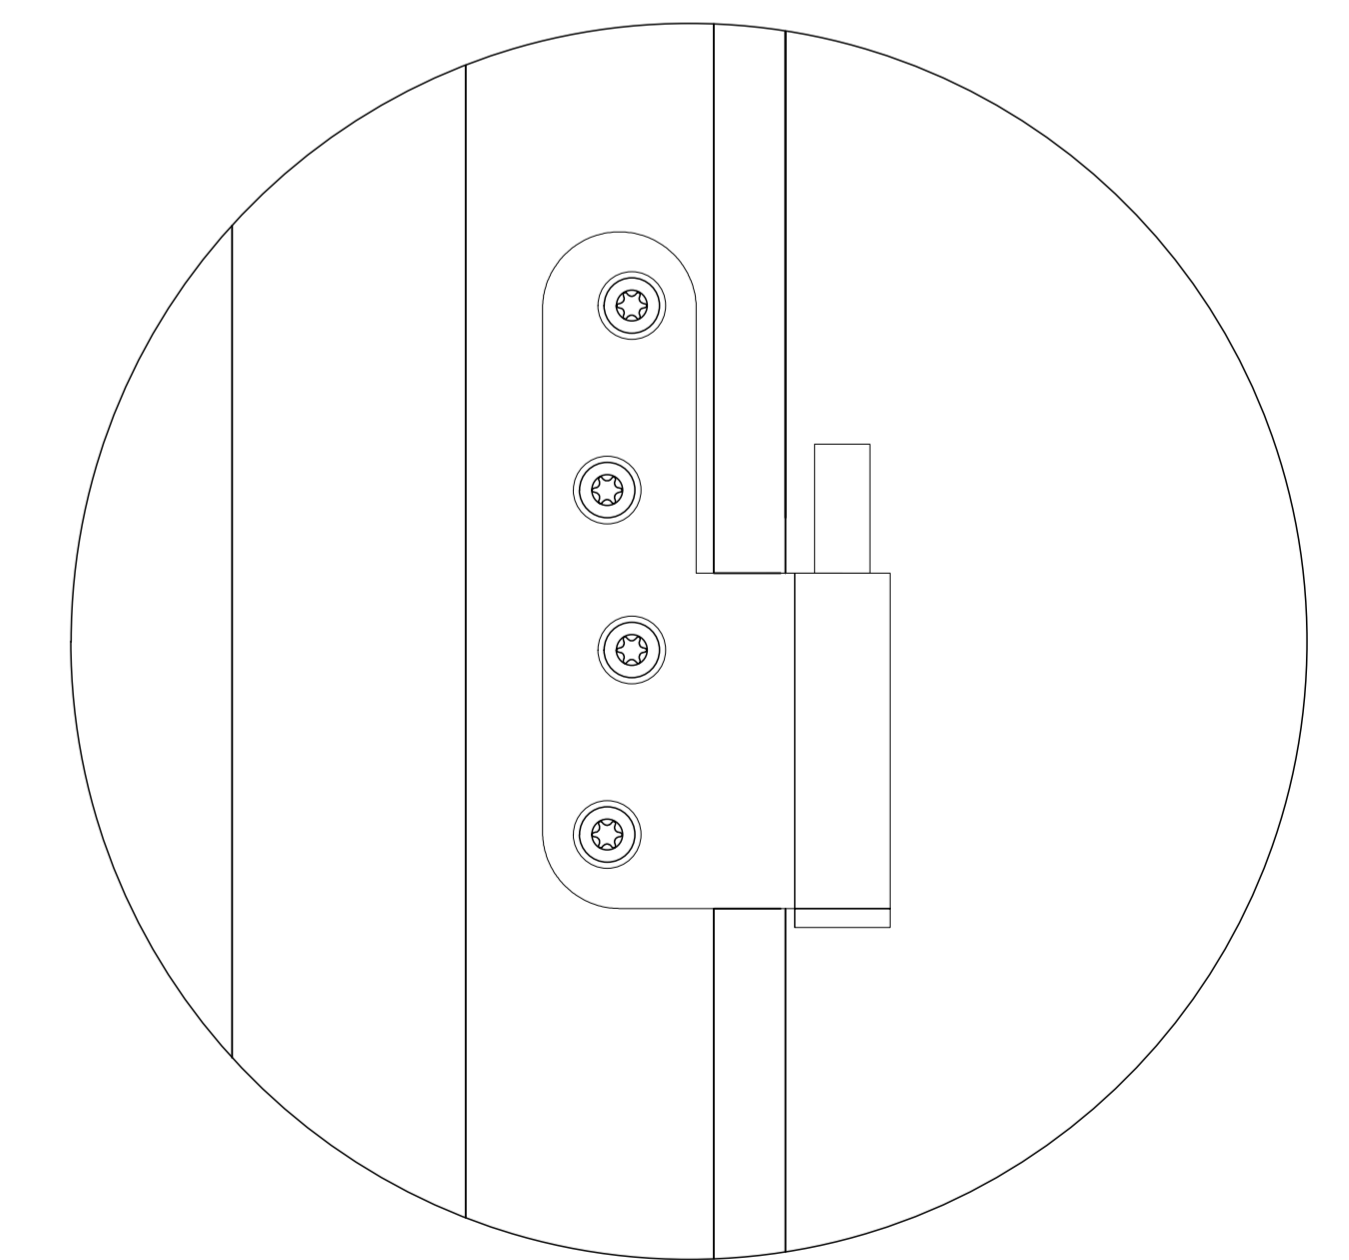

Contact address:
THERMOD AB
Söderborgsvägen 32
SE-671 95 Klässbol, Sweden
tel. (0)570 72 74 70
fax. (0)570 72 74 71
info@thermod.se

Name:
Hinge change instruction
Date: 09-01-2018
Print format: A4, A3

Number:
901-001-01
Revision:
00